



*USER MANUAL*

***Odyssey***<sup>TM</sup>

***FLEX<sup>TM</sup> NUMERIC***

---

# ***Odyssey***™

---

We thank you for making the ultimate choice to purchase the **Odyssey**™ pager. Your new **Odyssey**™ pager will help you keep in touch while on the move be it business related or leisure. The **Odyssey**™ pager is designed with ease of operation in mind and it aims to provide you many years of reliable service. This user manual explains how the various features operate and provide important instructions to help the user get familiarize with operation of this unit.

---

# ***CONTENTS***

<b>1. PAGER STANDARD FEATURES</b>	<b>4</b>
<b>2. BUTTONS</b>	<b>5</b>
<b>3. DEFINITION AND TYPE OF ICONS</b>	<b>6</b>
<b>4. TURNING ON THE PAGER</b>	<b>7</b>
<b>5. FUNCTION MENU</b>	<b>8</b>
<b>6. TURNING OFF THE PAGER</b>	<b>10</b>
<b>7. TO SET THE TIME AND DATE</b>	<b>11</b>
<b>8. SET VIBRATION / AUDIBLE ALERT</b>	<b>12</b>
<b>9. ALERT SETTING MODE</b>	<b>13</b>
<b>10. RECEIVING AND READING MESSAGES</b>	<b>14</b>
<b>11. LOCKING AND UNLOCKING YOUR MESSAGE</b>	<b>15</b>
<b>12. DELETING YOUR MESSAGE</b>	<b>17</b>
<b>13. SETTING THE ALARM</b>	<b>19</b>
<b>14. BACKLIGHTING</b>	<b>21</b>
<b>15. OTHER FEATURES</b>	<b>22</b>

# 1

## ***PAGER STANDARD FEATURES***

The ***Odyssey™*** provides the following features as standard:

15 message slots capable of storing  
up to 28 digits per slot

Backlight

Real time clock(12hr) with calendar  
date display

Reminder alert

Message lock (Up to 5 message  
slots)

Message time stamping

Low battery indicator

Individual delete or delete all

In service range indication

Daily Alarm

4 Standard alert modes: Audio,  
Pleasing, Vibration and Sleep

4 Standard tone alert and 3 different  
pleasing melody alerts available for  
selection

(Specifications are subject to change without prior notice)



Function button

Read button




### **FUNCTION button**




- Use to enter into function menu mode
- Use to lock and unlock the message
- Use to turn on the back lighting display

### **READ button**

- Use to turn the pager on
- Use to read received message
- Use to select desire function
- Use to set clock, alarm, pleasing and standard alert mode

**TOP ROW ICONS**

 
	Audio alert icon
	Alarm icon
	Battery low icon

	Message lock icon
	In service range indicator
	Message continuation icon

## 4

**TURNING ON THE PAGER**

Insert battery into battery compartment and close the battery door. Pager will power up with full display of all LCD segments and emit a short audible alert with date and time display.



*standby screen*

To turn on the pager from the power off state, press and hold the **Read** button for more than 2 seconds.

To enter into the function menu mode, press the **FUNCTION** button for more than two seconds. This mode allows the user to access the various functions and features of the pager through a series of menu prompts.

Pressing the **FUNCTION** button allows you to scroll the menu prompts as illustrated (Page 9).

**Note**

Menu prompt **CLEAR ALL?**—will not appear if no message is received.

Pressing the **READ** button allows you to select the function and brings you into the setting mode (depending on the function selected). Pager returns to standby screen if no button is pressed within 8 seconds.



VIBRATION/AUDIO



POWER OFF



SET ALARM



SET ALERT



CLEAR ALL



SET TIME

 
 



ESCAPE

## 6

**TURNING OFF THE PAGER**

Press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode.



Press the **FUNCTION** button to display the **POWER OFF?** prompt, now press the **READ** button to turn off the pager. In the pager off state, pager displays only the date and time, alarm feature will operate as normal though the alarm icon  is not displayed. Pager will not be able to receive any message in this state.

The hour minute separator { : } continue to blink to indicate the clock is working properly.



Fig. 7a

 


Fig. 7b

Press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode.

Press the **FUNCTION** button to scroll through the menu prompts until SET TIME? prompt is displayed. Press the **READ** button to enter into the set time mode.

Pager will display with the year field blinking.

Press the **READ** button to increase this field(Fig. 7a).

Press the **FUNCTION** button to move to the date and time field(Fig. 7b).

Press the **READ** button to increase the digits in the each field. Proceed to complete setting the time field(hour, minute and AM/PM). Pager returns to standby upon completing all the fields.

 


Fig. 8a

 



Fig. 8b

You can select Vibration or Audible alert mode. At the standby screen, press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode. Pager will display either Fig. 8a or Fig. 8b depending on the initial state of alert mode it is in.

Press the **READ** button to select the audible or vibration mode. In the audible mode, pager will display the speaker icon on the top row to indicate to the user. No speaker icon  will be displayed in the vibration mode.

Enter this mode to select the different type of alerts :

*f*U**Standard Tone**   *f*U**Melody**   *f*U**Silent**

Press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode. Press the **FUNCTION** button to scroll through the menu prompt until **SET ALERT?**—prompt is displayed(Fig. 9a). Press the

 


Fig. 9a

Press the **READ** button to enter into the set alert mode(Fig.9b). Next, Press the **READ** button twice to scroll though the choice alerts available.

 


Fig. 9b

**Beep1 / Beep2 / Beep3 / Beep4 / Melody1 / Melody2 / Melody3 / Silent**

In the silent mode, pager continues to receive message though it will not emit any alert to prompt the user.

Press **FUNCTION** button to select the desired alert. Pager returns to standby after that.

## 10

## RECEIVING AND READING MESSAGES

 


Fig. 10a

 


Fig. 10b

 


Fig. 10c

 


Fig. 10d

The pager will emit an alert audibly or vibrates (depending on the alert setting mode) when a message page is received. The pager will also display the number of unread messages.

In the case if there are two unread messages, the pager will display as Fig.10a.

Press the **READ** button to display the first message(Fig. 10b).

Press the **READ** button to again to advance to the next screen of the same message to display the message arrival time(Fig.10c).

In the case where no message is received, pressing the **READ** button will cause the pager to display as Fig. 10d.

The pager allows you to lock up to 5 message preventing you from accidentally erasing them or losing them due to incoming message when memory is full.

 


Fig. 11a

 


Fig. 11b

 


Fig. 11c

### To lock message

Select the message you want to lock by pressing the **READ** button to scroll through the memory (Fig. 11a).

Press the **FUNCTION** button to display the **LOCK?** prompt (Fig. 11b). Press the **READ** button to lock the message. Pager will display **LOCKED** and the lock icon will appear on the top row of the LCD (Fig. 11c).

#### Note

Lock memory is full when up to 5 message are locked. Attempt to try to lock the 6th message will cause the pager to display **LOCK FULL**.



Fig. 11d

## To unlock message

The locked message can be unlocked in a similar way. Press the **READ** button to display the message you wish to unlock(Fig. 11d).

 


Fig. 11e

Press the **FUNCTION** button to display the UNLOCK?;-prompt(Fig.11e).

 



Fig. 11f

Press the **READ** button to unlock the message. The pager will display UNLOCKED;-and the lock icon  disappear (Fig.11f).



The pager allows you to delete either a single message or all message at any one time. Only read and unlocked message can be deleted .

### Selective Delete

Select the message you want to delete by pressing the **READ** button to scroll through the memory.

Press the **FUNCTION** button twice on the desired message screen to display CLEAR? prompt(Fig.12a).

 


Fig. 12a

 


Fig. 12b

Press the **READ** button to delete the message. The display will show the prompt CLEARED; to indicate message has been deleted(Fig.12b).

## Clear All

The pager will allow **CLEAR ALL**-function only if it receives more than one message. In the standby screen, press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode.

 


Fig. 12c

Press the **FUNCTION** button to scroll through the menu prompt until **CLEAR ALL?**-prompt is displayed (Fig.12c).

 


Fig. 12d

Press the **READ** button to delete all read and unlock messages. The pager will display **ALL CLEARED**-to indicate all message have been deleted(Fig.12d).

## 13

## SETTING THE ALARM

 


Fig. 13a



Fig. 13b

 


Fig. 13c



Fig. 13d

The pager has a daily alarm for you to set at a specific time to alert you of any important task. At the standby screen, press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode.


Press the **FUNCTION** button to scroll through the menu prompt until **SET ALARM?** prompt is displayed (Fig. 13a).

Press the **READ** button to enter into alarm setting mode. Pager will display the **ALARM ON** prompt (Fig. 13b).

Press the **FUNCTION** button to set the alarm. This will cause the hour field to blink.

Press the **READ** button to increment the hour field (Fig. 13c).

Press the **FUNCTION** button to move to the minute field and

set the minute field by pressing the **READ** button(Fig. 13d). Continue to set the AM/PM field in a similar way. Upon completion, pager returns to standby screen displaying the desired set time. Alarm icon  will lit up to indicate alarm is active.

### To Turn Off Alarm

While in standby mode, press the **FUNCTION** button and hold for more than 2 seconds to enter into the function menu mode. Press the **FUNCTION** button to scroll through the menu prompt until SET ALARM?-prompt is displayed.

Press the **READ** button will cause the pager to display i ALARM ONj-(Fig.13e).

Press the **READ** button again to turn off the alarm. Pager will display as Fig.13f.



Fig. 13e

 


Fig. 13f

 


Fig. 13g

 
Next, press the **FUNCTION** button to return the pager to the standby screen (Fig.13g).

## 14

## BACKLIGHTING

In low light conditions, press the **FUNCTION** button to turn on the backlight.

The backlight will go off automatically after 8 seconds.

*Fig. 14*

### Memory Full

Pager will display MEM FULL—when all 15 slots are filled(Fig.14).

### In Service Range Indication

When the pager is within the coverage area, the In Service Range Indicator icon will appear on the line of the display screen.



### Low Battery Indicator

The low battery indicator lit up when the battery energy level reaches a low level. Users are advised to replace the battery immediately.



## Battery Information

The pager is designed to operate with a AAA-size alkaline battery.

**Note** Do not use carbon zinc battery.

## To install or replace the battery

- fUPlace the pager face down in the palm of your hand
- fUPush to slide the battery door out
- fUPlace the new battery into the battery compartment

**CAUTION** Ensure battery polarity is correct before installing battery. Do not insert battery in reverse polarity.